
Thank you for purchasing the ControlSCAPE Desktop Time Clock, the only 100% reliable, 100% guaranteed landscape lighting controller in the world. Please follow the simple instructions below to operate your landscape lighting. Enjoy!

Basic Operation

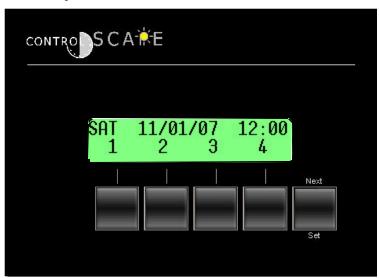

Once the ControlSCAPE Desktop Time Clock has been set-up it will automatically control the landscape lighting according to the timers (actual time or sunrise/sunset) enabled during initial installation. However, the Desktop Time Clock still acts as a manual switching device for the landscape lights that are on the system. Simply press the buttons labeled 1 thru 4 to toggle the first four landscape lighting loads on and off. To gain control of loads 4 thru 8 press the Next/Set button. To revert to loads 1 thru 4 press the Next/Set button again.

Lansdcap	e Lighting Loads
	Load 5:
Load 2:	Load 6:
Load 3:	Load 7:
Load 4:	Load 8:
Timer Setti	ngs
Timer 1	Action is: ON OFF
	Runs at: TIME DAWN DUSK NEVER
	Effects Loads: 1 2 3 4 5 6 7 8
Timer 2	Action is: ON OFF
	Runs at: TIME DAWN DUSK NEVER
	Effects Loads: 1 2 3 4 5 6 7 8
Timer 3	Action is: ON OFF
	Runs at: TIME DAWN DUSK NEVER
	Effects Loads: 1 2 3 4 5 6 7 8
Timer 4	Action is: ON OFF
	Runs at: TIME DAWN DUSK NEVER
	Effects Loads: 1 2 3 4 5 6 7 8

Changing Timers

Enter Programming Mode

Press and hole the Next/Set button for up to 3 seconds until you see "Set Time/Date?"

Set Time/Date? YES Select Next/Set to skip.

Set lon/lat? VFS

Select Next/Set to skip.

Setup UPB? YES Select Next/Set to skip.

Set on intensities? YES Select Next/Set to skip.

Setup Timers? YES Select YES to set up the 4 internal clock timers. Select Next/Set to skip. Note that current information about these timers is on Page 1 of this manual.

Setup Timer #1? YES NO Select YES to setup Timer #1. Select NO to skip Timer #1 and move on to the next Timer.

Timer #1 action is: ON OFF Select ON to have this Timer turn the devices selected in the next 3 steps ON when Timer activated. Select OFF to have this Timer turn the devices selected in the next 3 steps OFF when Timer activates.

Timer #1 runs at: TIME DAWN DUSK NEVER Select TIME to activate Timer at the same time each day. Select DAWN to activate timer based on the Sunrise. Select DUSK to activate this timer On based on the Sunset. Select NEVER for no activation.

TIME Hour: 04 - + SET

Use the - and + buttons to select the Timer activation Hour (based on 24 hour military time). Press SET when finished.

Minute: 27 - + SET Use the - and + buttons to select the Timer activation Minute. Press SET when finished.

DAWN#1 Dawn Offset: + 10 - + SET Use the - and + buttons to select the Timer activation Dawn Offset (number of minutes before or after sunrise). The Offset can be up to - or + 128 minutes. Press SET when finished.

DUSK #1 Dusk Offset: - 10 - + SET Use the - and + buttons to select the Timer activation Dusk Offset (number of minutes before or after sunset). The Offset can be up to - or + 128 minutes. Press SET when finished.

#1 Devices 12345678 DEL ADD <- -> Use the arrows to select devices 1 - 8. Press ADD to add selected device to Timer. Press DEL to remove selected device from timer. NOTE: Highlighted devices will turn ON with an ON Timer and OFF with an OFF timer. Press SET when finished.

Complete above step for all 4 Timers.

View Settings? YES Select YES to view all settings made during previous steps. Use Next/Set to scroll through settings. Select Next/Set to skip.